


# IMPORTANT INSTALLER!

Donut GASKET must be installed ON EACH END as shown.

INSTALLER IS RESPONSIBLE for properly joining and installing merchandisers as described in Standard Reach-In Manual, P/N 0387183.

## RLTM / RMTM

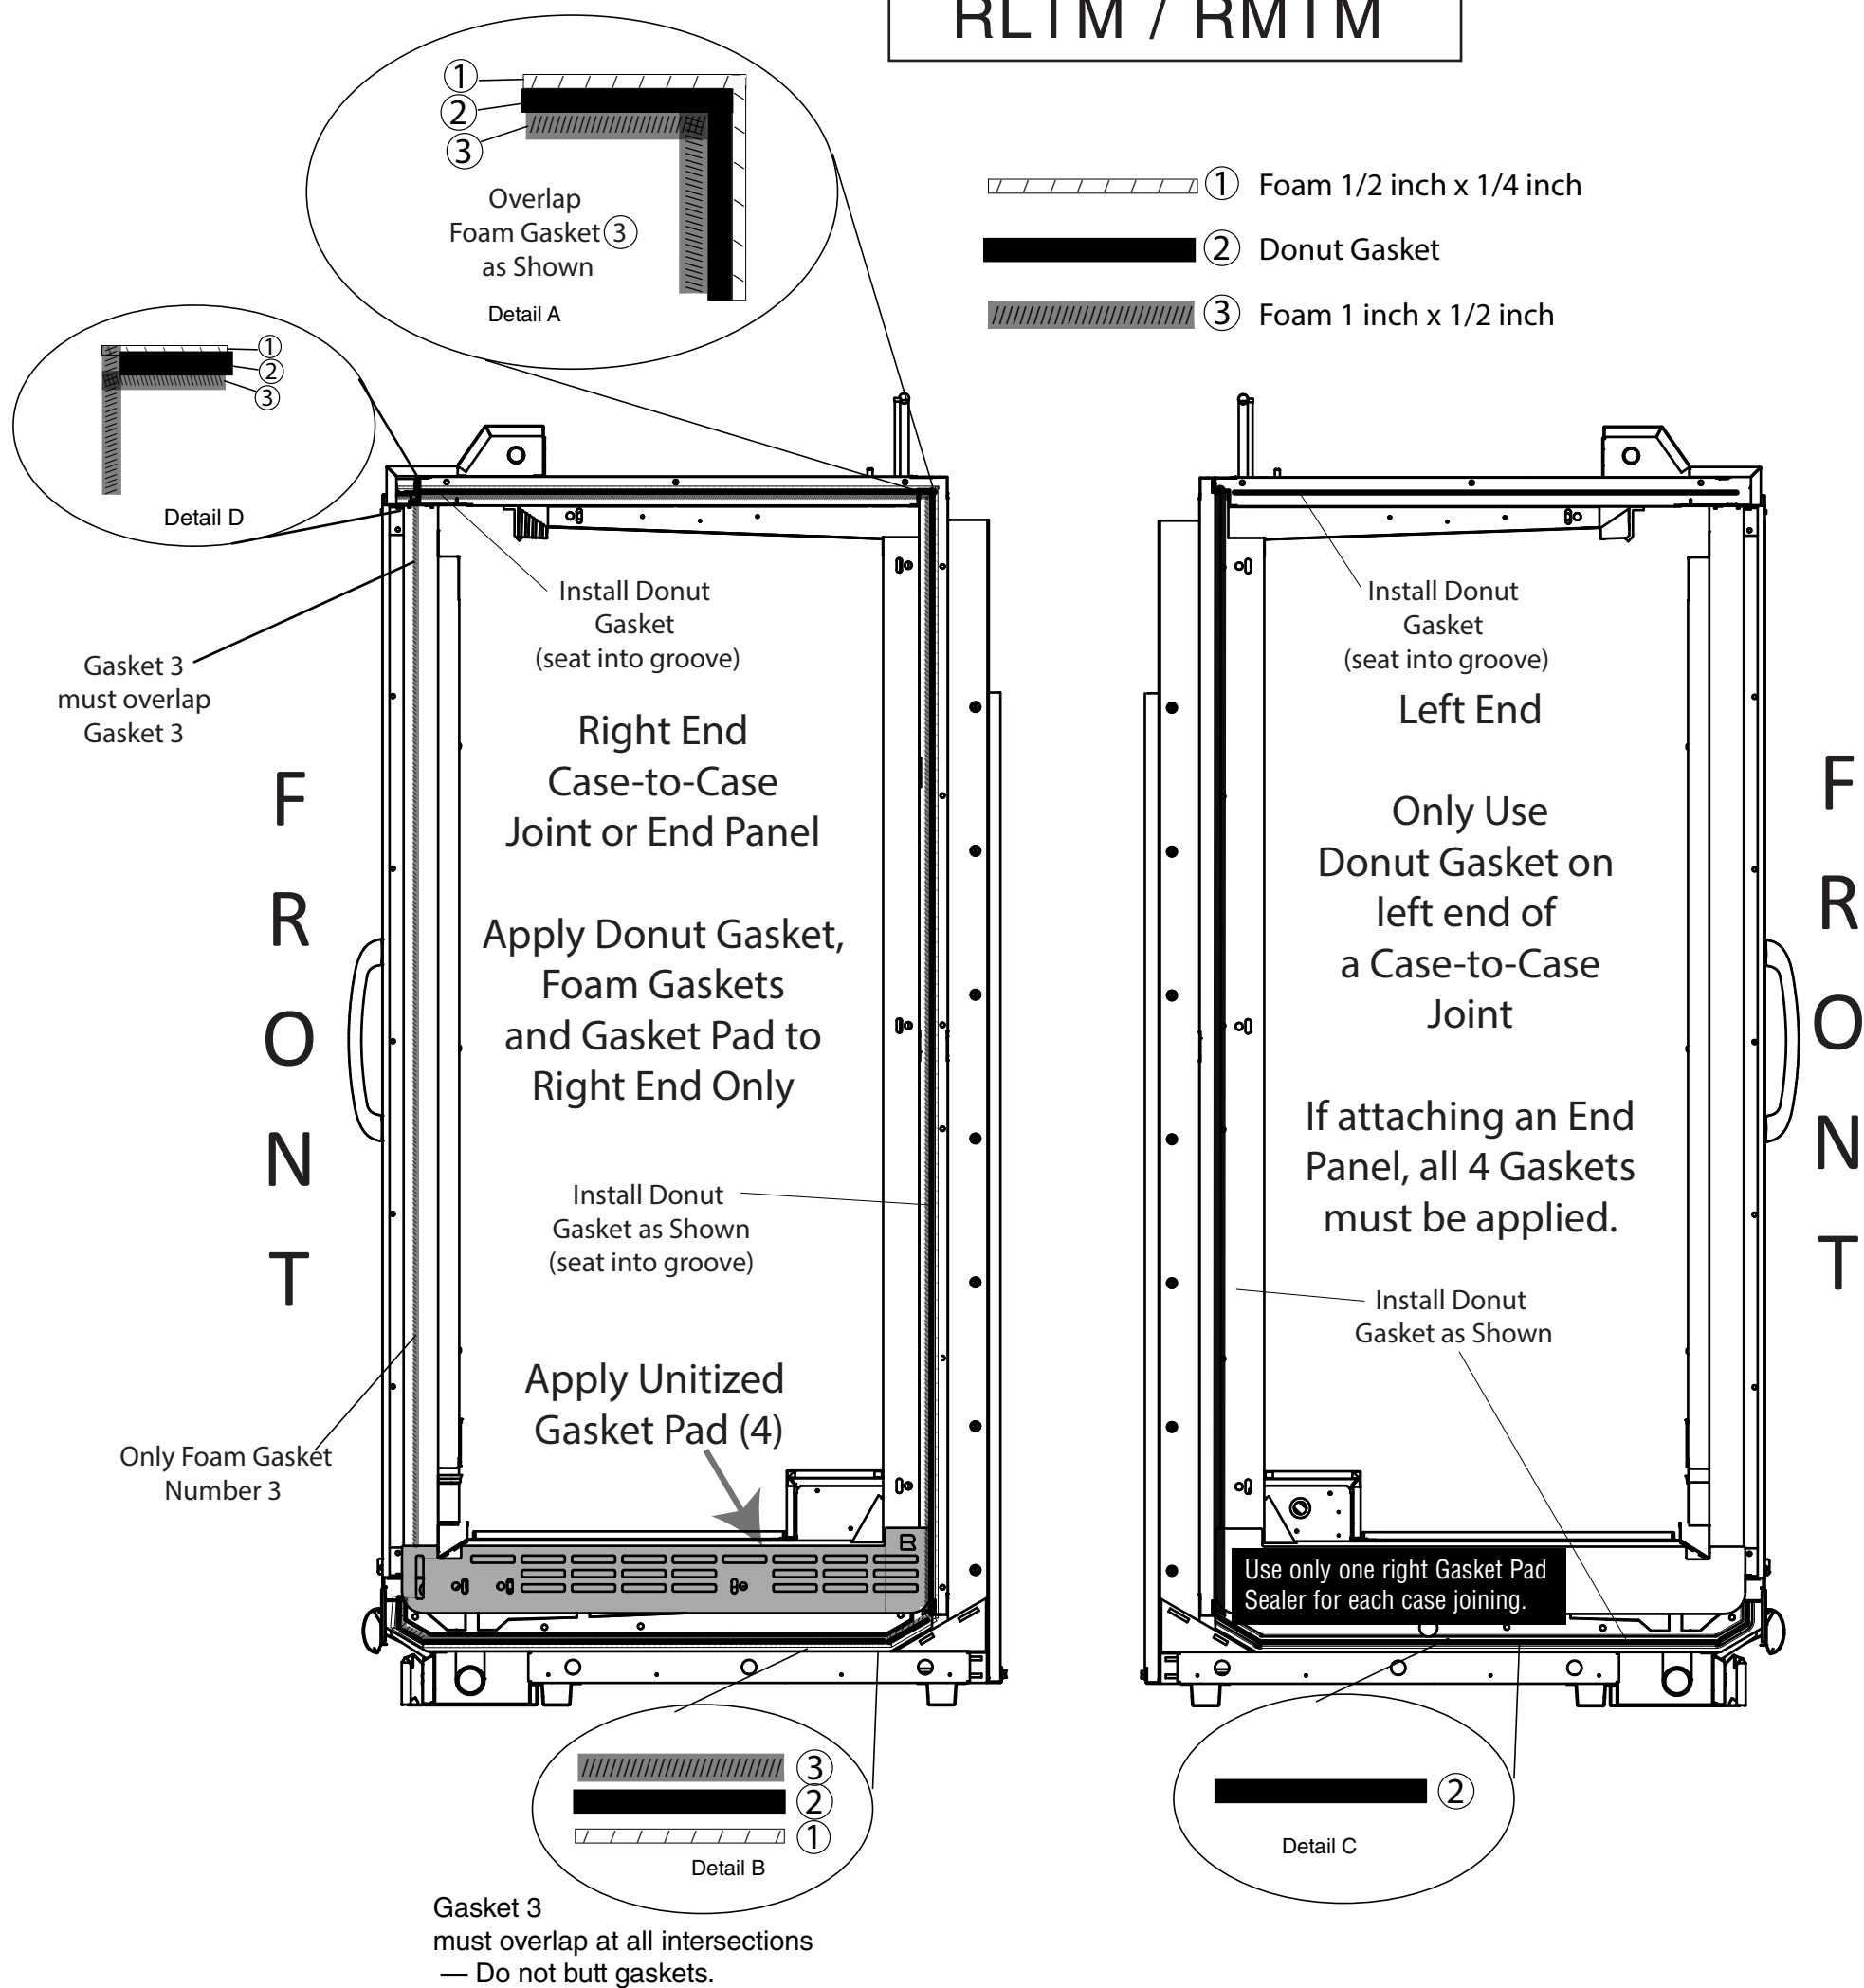

P/N 0479783\_E